


# Empire Fitts Profiles

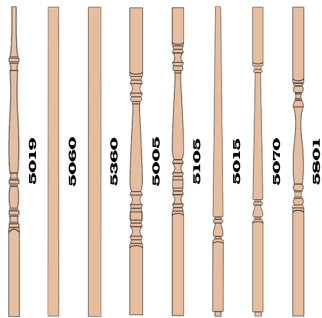

## Balusters 2

### Canterbury

5019

### Craftsman

5060

5360

### Hampton

5005

5105

### Traditional

5015

5070

### Olympia

5801

## Accessories 1

3000

### Baluster

3003

3009

### Rail

3001

3011

## Newel Post



3005

3006

3007

3008

3015

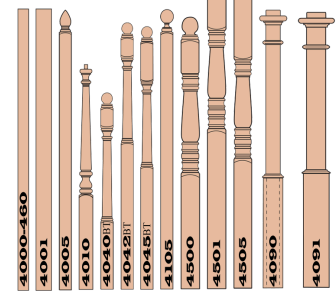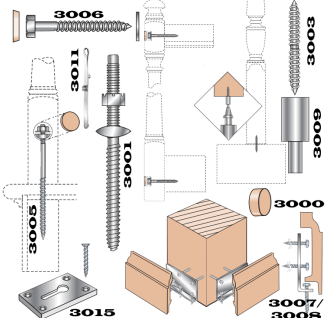

## Newel Post 3

### Craftsman

4090

4091

4001

4000-460

4005

4105

### Hampton

4500

4501

4505


### Traditional

4040BT

4042BT

4045BT

4010

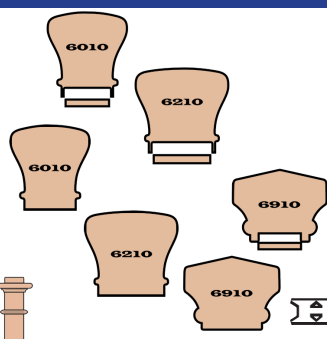

## Handrail 4

6010

6010-P

6210

6210-P

6910

6910-P

## Shoe & Wall 5

### Shoe Rail

6045

6006

### Wall Accessories

3010

3010-AB

3010-BL

3010-BN

3010-RB


7317

7337

### Wall Rail

6040

6040

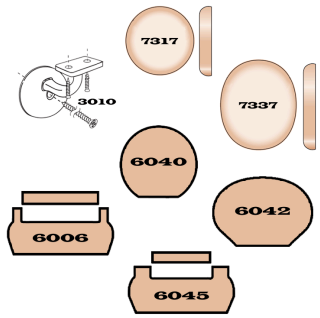

## Fittings 6

### Starting

7010

7030

7035

### Transition

7009

7019

7012

7011

7020

7021

7081

### Gooseneck

7089

7086

